



# Digital HD LED TV

## 3589

# CROSLLEY®

## PROGRAM YOUR LED TV TO RECEIVE & DISPLAY CHANNELS USING YOUR REMOTE CONTROL. It's Easy!

To maximize your viewing experience, We have included an on-screen wizard to guide you through your TV setup the very first time you turn on your LED TV. Follow the on-screen prompts to: select your TV input, and select the language and time zone of your choice.

### 1) REGULAR CABLE OR OVER-THE-AIR ANTENNA (NO BOX)

Receive channels through RF Cable / Antenna input using a regular antenna or regular cable service signal, without a satellite or cable box.

#### STEP 1.1

**A.** Connect your TV Signal Source (cable from out-of-wall cable or antenna for cable service without a box) directly to Cable / Air input on your LED TV.

#### STEP 1.2

##### First time installation

When you power ON the unit for the first time, the screen will show the initial setup dialog. There are 3 options in initial setup menu:

- **Menu Language** : English, Français or Español
- **Signal type** : Air or Cable
- **Auto Search**
- Press the ▲▼ button to highlight desired menu language or signal type and press the ◀▶ button to select desired menu language and signal type.
- Press the ▲▼ button to highlight **Auto Search** and press ► button to perform auto channel scan, the Auto scan process will take about 30 minutes, while the auto scan process is finished then the first memorized channel will appear on the screen.



You can Scan for channels at any time using the following instructions:


#### STEP 1.3

##### Channel Programming

- Press the **MENU** button on the remote control, then press the ▲▼ button to highlight **Channel** and press the ► button to access to the menu.
- Press the ▼ button to highlight **Signal Type**, then press the ◀▶ button to select desired **Air** or **Cable**.
- Press the ▼ button to highlight **Auto search** and press the ► button to launch the Auto channels scanning. The scanning process will take about 30 minutes or more (depends on how many TV stations are in your area), when the auto scanning process is finished the first memorized station will appear on the screen.

### 2) DIFFERENT SIGNAL SOURCE (CABLE BOX, SATELLITE BOX, EXTERNAL TV TUNER, VCR)

Receive channels from different signal sources (cable box, satellite box, external TV tuner, VCR) through different inputs.

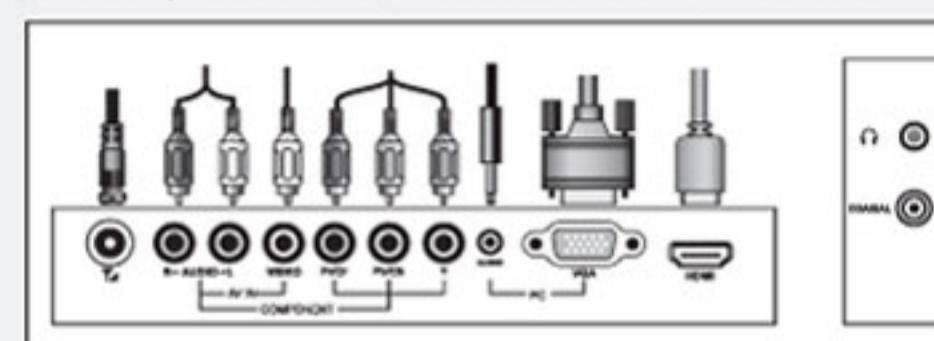

#### STEP 2.1

**A.** Select the correct input connection:

- TV (CABLE / AIR)
- COMPOSITE (Yellow, White, Red)
- COMPONENT (Green, Blue, Red)
- HDMI

**B.** Make the physical connection. If you have an HD service, you should use the HDMI (best) or COMPONENT connection.

#### STEP 2.2

**A.** Turn on your LED TV.

**B.** Press **INPUT** button on the remote control.

**C.** Use the ▲▼ buttons to select the connection you are using and press **ENTER** button.

**D.** Turn on your Cable Box, Satellite Box, External TV Tuner, or VCR and you will see a picture on your TV screen.

If there is not a picture, make sure you have selected the correct input in the INPUT menu.

**E.** If the selected input is an RF Cable / Antenna connection, you should be aware that the TV needs to be on either channel 3 or 4, matching the channel which has been selected on the back of the Cable Box, Satellite Box, External TV Tuner, or VCR. Please refer to your A/V equipment's user manual for more details.

NOTE: The TV will be displaying any TV station or program selected by the Cable Box, Satellite Box, External TV Tuner, or VCR. The TV will not be able to change programs or channels; this is controlled by the equipment sending the signal. If the service being used includes a box with two different outputs for two different (distant) rooms, then scanning channels should help to find the signal. Be aware that the channel to be selected varies from provider to provider, meaning you may have to call your provider company so they can provide you with the specific channel to use with high definition TVs. Some examples of these channels are 105, 106, 115, and 116.

### REMOTE CONTROL

The arrow buttons on the remote control correspond to the arrows indicated in the previous steps. They border the **ENTER** button.

**INPUT** Press the **INPUT** button to select source model.



### 3) OPTIMIZE

Fine tune your TV settings for home use.

After completing either STEP 1 or STEP 2, please follow the steps below to optimize your TV viewing experience.

**A.** Press the **MENU** button.

**B.** Use the ▲▼ buttons to select the Picture icon, then press ► button.

**C.** Use the ▲▼ buttons to highlight individual VIDEO options.

**D.** Use the ◀▶ buttons to change the settings to show your ideal picture.

**E.** Press **MENU** to exit the on-screen display menu.



### 4) PROGRAM

Enjoy the convenience of your TV's program guide.

If you followed STEP 1, take the following steps to make sure that the correct program times are shown when pressing the **GUIDE** button.

**A.** Press the **MENU** button.

**B.** Use the ▲▼ buttons to select the Time icon, then press ► button.

**C.** Use ▲▼ buttons to highlight Time Zone.

**D.** Use the ◀▶ buttons to change the settings to your desired time zone.

**E.** Press **MENU** to exit the on-screen display menu.



# QUICK START GUIDE



Questions?  
Need some help?  
This manual will help you  
enjoy your new product



If you still have questions,  
call our help line:  
USA/CANADA  
1-855-885-6325



or visit us at:  
[www.855support.com](http://www.855support.com)

This product is manufactured by: Star Light Electronics Co.Ltd.  
USA: 4060 East Jurupa Street, Unit B, Ontario, California 91761-1415  
Canada: 100 Granton Drive, Richmond Hill, Ont Canada L4B 1H7